Cochlear Mini Microphone 2+ TIPS & TRICKS



The Mini Mic 2+ transmits audio from a variety of sources directly to Cochlear sound processors (up to 82 feet).

This product is compatible with Cochlear Nucleus Implants systems and Cochlear BAHA 5 sound processors.

PAIRING

After the initial pairing, sound processors will stay connected to the Mini Mic.

- 1. Turn the sound processors off.
- 2. Turn the Mini Mic on. The indicator light will flash green to confirm Mini Mic is powered on.
- 3. Press the pairing button on the Mini Mic. The indicator light will flash yellow to confirm pairing mode. The Mini Mic is in pairing mode for 20 seconds.
- 4. Turn the sound processors on. The child will hear a melody from the sound processors once devices are paired.
- 5. An adult should <u>always</u> confirm successful connection with a listening check.



CHANGE FUNCTION

Mini Mic 2+ functions including microphone, telecoil streaming, external audio streaming, and FM connectivity.

- 1. Locate the Mode of Operation button on the back of the Mini Mic, below the pairing button.
- 2. Press this button once to confirm the current function. An indicator light will blink next to the corresponding icon (microphone, telecoil, external audio or FM).
- 3. To change function, press the button until the light indicates desired function.

 Note: Line-In and FM Modes can only be selected if an audio cable or FM receiver are connected.

 View this Step-by-Step Video for additional support.





www.cdhhe.isdh.in.gov

Cochlear Mini Microphone 2+ TIPS & TRICKS



REMOTE MICROPHONE STREAMING

- 1. Turn on the Mini Mic and the sound processor.
- 2. Press and hold the button on the sound processor (3 seconds) to put the device into streaming mode.
- 3. The child will hear a melody from the sound processors to confirm streaming. An adult should <u>always</u> confirm active streaming with a listening check.
- 4. To mute/unmute the Mini Mic, press the button between volume up/down on the Mini Mic. An indicator light below the mute/unmute button will flash yellow while muted.



CONNECTING TO ROGER

Connecting only needs to be done once unless the Roger X receiver is connected to another transmitter.

- 1. Turn on the Roger transmitter and the Mini Mic.
- 2. Plug the Roger X receiver into the bottom of the Mini Mic.
- 3. Press Connect on the transmitter. Hold the Roger X receiver within 1 inch of the transmitter.
- 4. Check the mode of operation indicator light to confirm the Mini Mic automatically switched to FM mode. Once connected, the device will remain connected for future use.
- 5. Ensure the sound processors are in streaming mode and <u>always</u> confirm the connection with a listening check.





Cochlear Mini Microphone 2+ TIPS & TRICKS



STREAMING EXTERNAL AUDIO

Listen to audio from phones, computers, laptops, and tablets, etc. with the line-in cable provided in Mini Mic kit.

- 1. Plug the mini jack cable into the bottom of the Mini Mic next to the FM connector.
- 2. Plug the other end into the audio out of the external device (i.e. laptop, phone).
- 3. Ensure the sound processors are switched into streaming mode.
- 4. Check the Mode of Operation indicator light to confirm Line-In is selected.



CONNECTING TO TELECOIL

Telecoil (T-Coil) function may be available at large venues such as theaters, churches, and auditoriums.

The telecoil feature allows users to stream the main speaker's voice to the sound processors.

- 1. If an environment has telecoil capabilities, turn on the Mini Mic.
- 2. Switch the sound processors into streaming mode.
- 3. Press the Mode of Operation button until the indicator light confirms Telecoil mode. Note: Venues that have telecoil capabilities will often display a sign to notify individuals.



