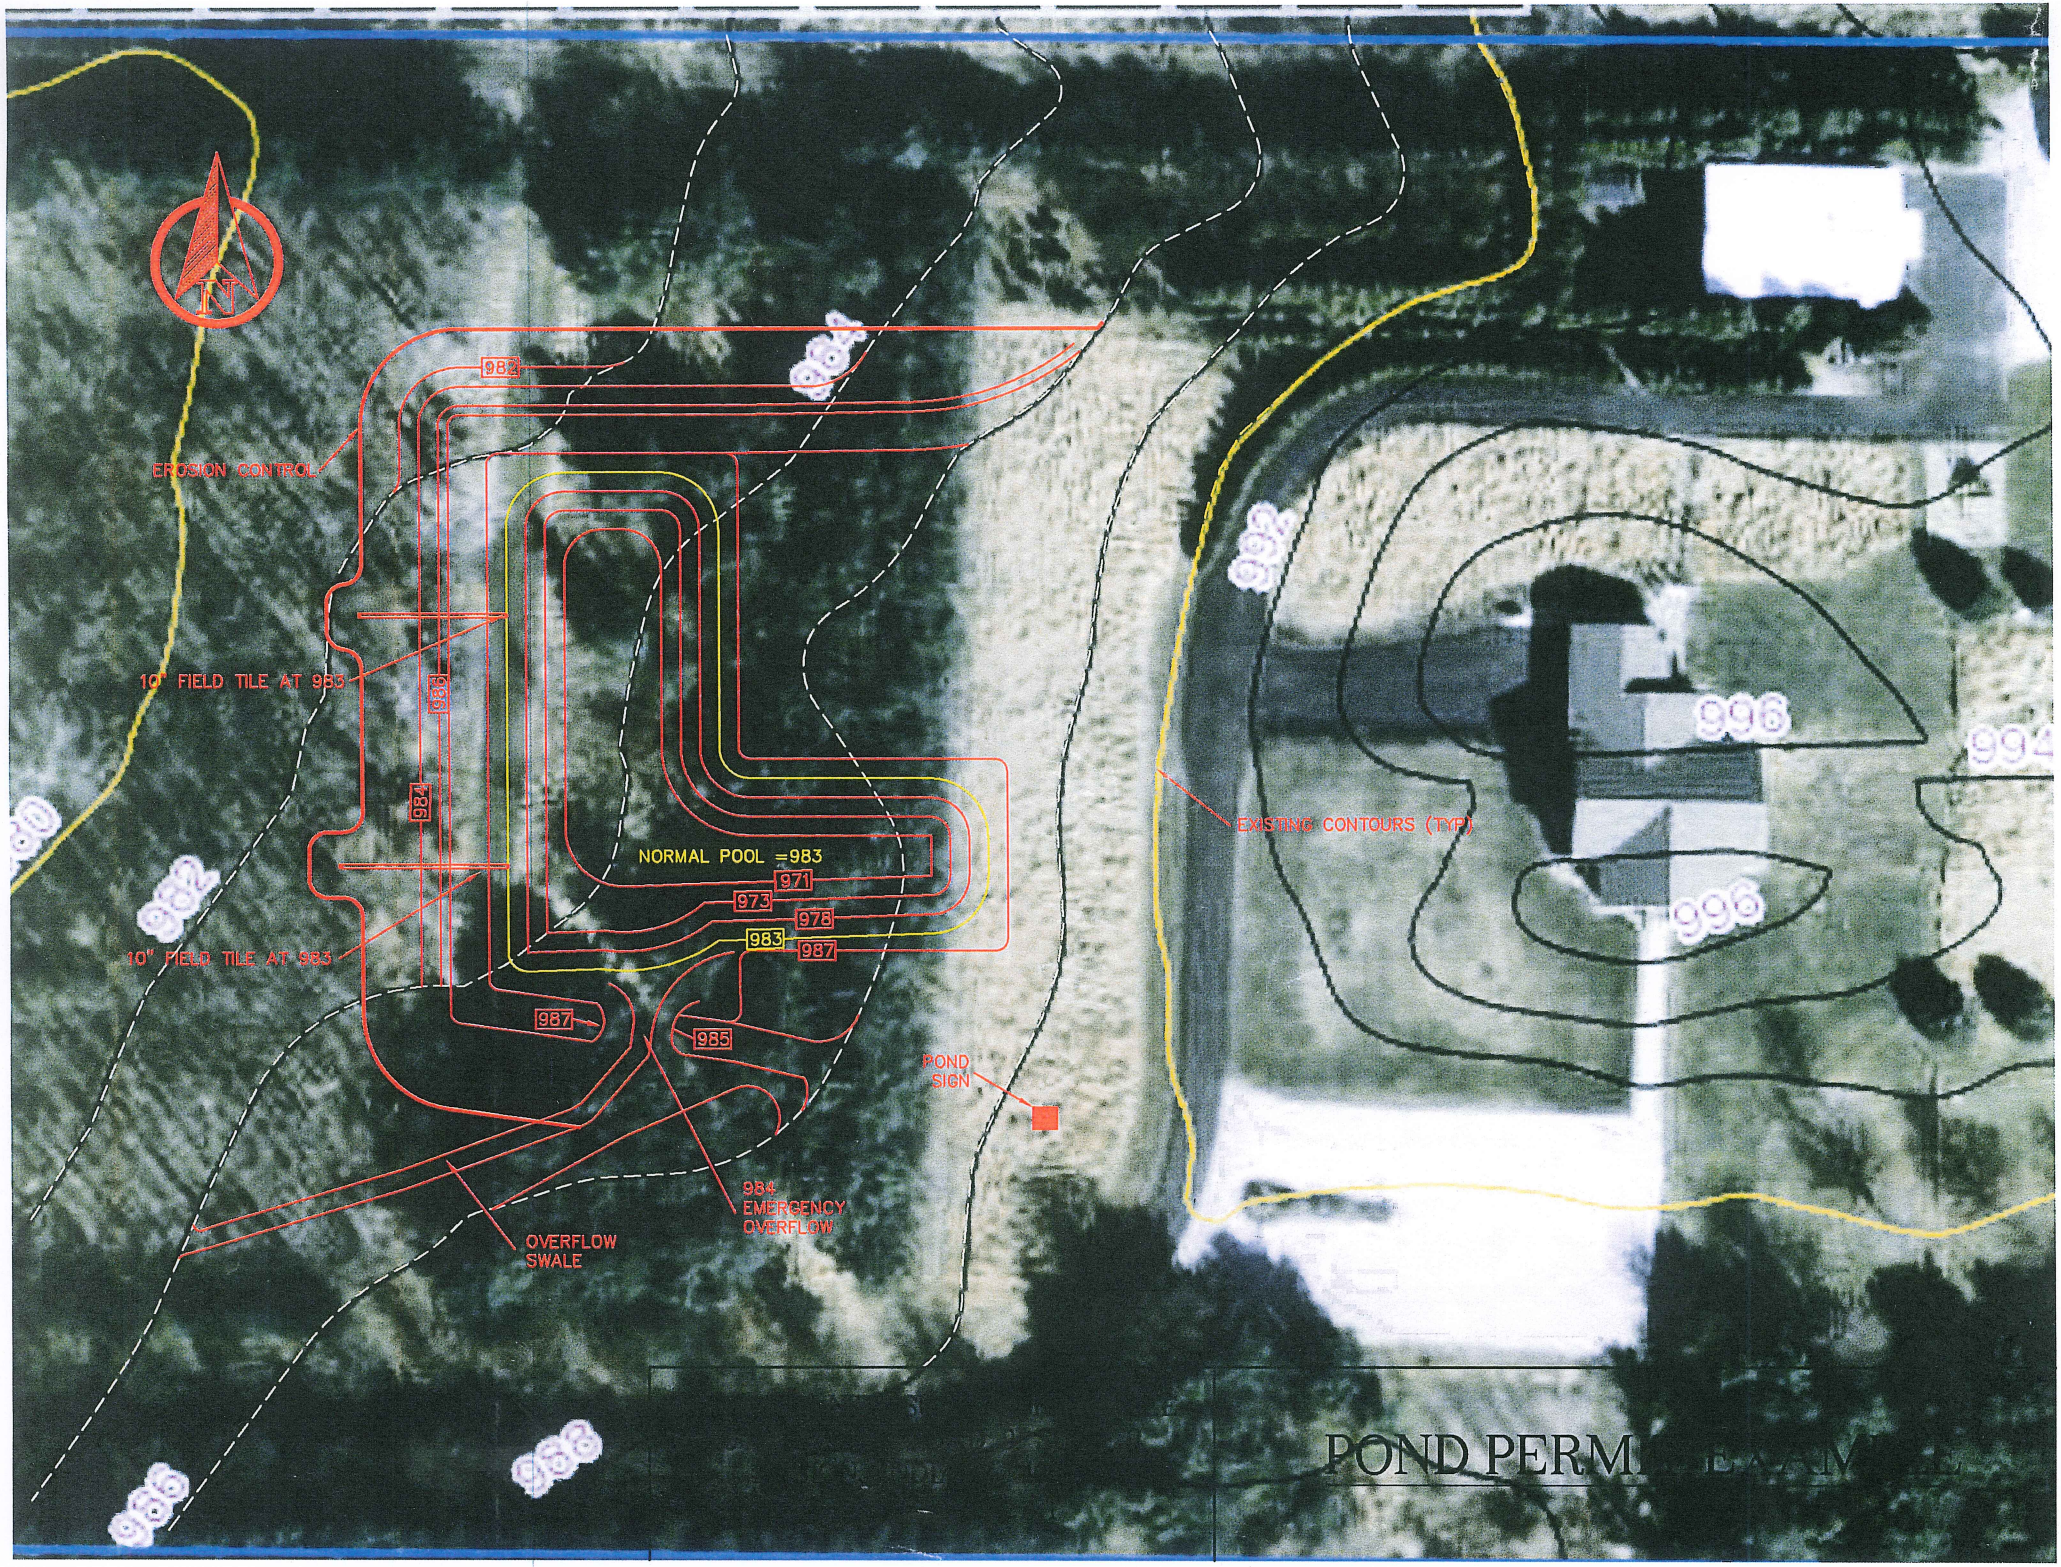
N
982
EROSION CONTROL
10" FIELD TILE AT 983
986
984
NORMAL POOL =983
971
973
978
983
987
10" FIELD TILE AT 983
987
985
POND SIGN
984 EMERGENCY OVERFLOW
OVERFLOW SWALE
EXISTING CONTOURS (TYP)
996
994
996
POND PERM